



#### **Features**

- Remote actuator unit is factory-fitted on the left hand side of the DD-Frame circuit breaker
- The RAU module is designed to function on a wide voltage range: 18 Vdc to 80 Vdc
- The RAU can be supplied from main system voltage or a standalone source
- The DD-Frame circuit breaker operates on the main system voltage, AC or DC
- LED for status indication
- Selectable pulse or constant actuate signal operation
- Provides status of the load side of the circuit breaker
- Can be paired with up to a 3 pole DD-Frame circuit breaker state of circuit breaker
- Actuation of circuit breaker occurs internally
- Compact size (19 mm, matching DD-frame outline)

#### **Applications**

- Battery management
- **Telecommunications**
- Railways
- Solar
- System automation
- Switching operations in distant, inconvenient or unreachable environments

The remote actuation unit (RAU) is a factory-fitted module that enables the automated switching of a DD-Frame circuit breaker. The RAU internally actuates the circuit breaker both ON and OFF. The RAU is mounted on the left hand side of the circuit breaker and can actuate up to three poles. The RAU is available with circuit breakers with a standard toggle handle only. The unit has an LED that provides an indication of the mode of operation (PULSE or CONSTANT). A colour flag shows the position of the latch mechanism of the connected circuit breaker - green for OFF and red for ON. The RAU provides the option to set the actuation signal voltage between pulse or constant mode. This is selected by a switch situated on the front of the RAU.

#### **Approvals**















(UL489A) (CSA C22.2 No. 5-16)

(UL489;

(UL1077: CSA C22.2 NO.5) CSA C22.2 NO.235-04)

(IEC / EN 60947-2; (GB14048.2; IEC / EN 60934)

GB17701)

(IEC 60947-2: IEC 60934)

(IEC 60947-2)

**RAU-SERIES-DAT REV. F** JUNE 2023 2303042

**Data Sheet** Page 1 of 12

e CBI CONST 50A 

[H]electric

Hi electric

# Remote Actuator Unit (RAU) for DD-Frame (D7)

## **Technical Data**

Product Type				RA	J			DD Frame
Supply voltage	18 Vdc to 80 Vdc							
Actuation signal voltage	HIGH (ON) Min. 3.3 Vdc to Max. 60 Vdc			′dc	eet			
(For other voltages refer to page 11)		LOW	(OFF)	Min. 0.0 V	Min. 0.0 Vdc to Max. 0.5 Vdc			
Starting current		< 250 mA					Dat	
Number of poles that can be actuate	d			1 to 3 pole DD-Fra	me - factory fitted			aker
Ambient operating temperature				-40 °C	-65 °C			Bre
Typical actuation time			OFF state	to ON state	2	2 seconds		rcuit
		(	ON state to	OFF state		1 second		ē
Power consumption			Idle I	node	•	< 250 mW		iam
			During a	actuation		< 7.5 W		per DD Frame Circuit Breaker Data Sheet
Number of operations				In excess	of 2000			perl
Flammability				13 No flames persis	stence at 850 °C			values as
Toxicity		F2 - Smoke index of ≤ 40					alue	
Pollution degree	PD2 - Normally only non-conductive pollution occurs. Temporary conductivity caused by condensation is to be expected.					All vi		
Signal Out Resistance to LOAD tern	330 kΩ ±5 % (2 W)							
Product Type	Circuit Break	ker	Circuit Breaker Circuit Br		reaker	Circuit	Breaker	
Approvals	IEC / EN 60947-2, GB1404	7-2, GB14048.2, CE, UKCA		N 60947-2, GB14048.2, CE, UKCA	IEC60947-2,	CE, UKCA	AS/NZS 609	947-2, UKCA
Number of Poles	1, 2, 3			2 - 3 (parallel) 1 p, 2p paralle				, 2
Maximum Voltages	240 / 415 Vac, 8			80 Vdc	60 Vo		125	öVdc
Current Ratings	0.1 - 60 A(ad 0.1 - 100 A(d			110 - 250 A 125 A, 250		A, 300 A	0.1 -	60 A
lcs	5 kA (DC),1.25kA	A (AC)	5 kA		2.5kA		2.5kA	
Icu	(AC) 10 kA		5 kA		5	kA		
Product Type	Circui	it Breaker		Circuit Bre	aker		Circuit Breake	r
Approvals	U	UL489		UL489 A, CSA C22.2 No. 5-		UL48	39A, CSA C22.2 N	lo. 5-16
Number of Poles		, 2, 3		1, 2, 3		2 - 5 (parallel)		
Maximum Voltages	120 Vac, 120 / 240		) Vdc	60 Vdc		80 Vdc		
Current Ratings		0.1 - 80 A(ac) 0.1 - 100 A(dc)		125 A, 250 A, 300 A		110 - 250 A		
AIC	AC - 10 k	A, DC - 20 kA	20 kA 14 kA			10 kA		

Product Type	Circuit Breaker	Circuit Breaker	Switch	Switch
Approvals	IEC / EN 60934, CE, GB17701	UL1077, cURus	-	-
Number of Poles	1 - 4	1 - 6	-	-
Maximum Voltages	240 / 415 Vac, 80 Vdc	277 / 480 Vac, 80 Vdc	-	-
Current Ratings	0.1 A - 100 A (1 p), 0.1 A - 70 A (2 - 3 p)	.1 A - 100 A (1 p), 0.1 A - 70 A (2 - 4 p)	-	-
Interrupting Capacity	-	2 kA/U2/ U3 (AC) 5 kA/C1 (AC) 5 kAU2/ U3 (DC)	-	-
Rated conditional S/C	3 kA (AC) PC1, 5 kA (DC) PC1	-	-	-
lcm	-	-	-	0.6 kA (for 1 switch)

Verify approvals for specific ratings in accordance with the relevant test certificate

# **Torque Table**

Description	Size	Torque Value
Front Inserts	M3	0.5 - 0.8 N.m
Front inserts	6 - 32	5 - 7 lbf.in
	M5	2.0 - 2.8 N.m
Rear Studs	10 - 32	18 - 24 lbf.in
Real Stuus	M6	3.5 - 4.0 N.m
	1/4 - 20	30 - 35 lbf.in
Flush Rear Screws	M5	1.7 - 2.3 N.m
	10 - 32	15 - 20 lbf.in

# Continues on page 3

# Hi electric

low voltage

# Remote Actuator Unit (RAU) for DD-Frame (D7)

	Aux Switch Specification
Gold DB3	EN61058 0.1 A @ 250 Vac & 0.1 A @ 80 Vdc and UL1054 0.1 A @ 125/250 Vac & 0.1 A @ 30 Vdc & 0.3 A @ 60 Vdc
Silver DB2	EN61058 10 A @ 250 Vac & 0.1 A @ 80 Vdc and UL1054 10 A @ 125/250 Vac
Silver V4D	EN61058-1 10 A @ 250 Vac

## **Ordering Information**

Group 1:	Code Description		Comments						
Frame	D	DD-Frame RAU							
Group 2:	Code		Description			Co	mments		
Туре	7	RAU Non-Lockout type (18 - 80 Vdc) Fitted on Left of Circuit Breaker Additional Circuit Breaker pole		RAU D7 + 1 <sup>st</sup> Circuit Breaker pole					
	2			Maximum of 2 additional Circuit Breaker poles					
Group 3:	Code		Description			Co	mments		
Mounting	A	Front Mount, Rectang	gular Aperture - Sta	ndard Toggle Handle	Maxim	um penetration depth into th	e product by the mou	nting screw is 6mm	
Group 4:	Code	Description Standard Toggle Handle				Co	mments		
Handle Type or Blank for Reduced Handle	A					Standard Toggle Handle, g	oes to Off Position w	hen tripped	
Group 5:	Code		Description		Comments				
Termination	3X	÷.,	Terminal (dia 7.8 m	· ·		O A Max per terminal (80 Vdc connector has sufficient spa	ice so as not to interf		
	4X		Screw Terminal, (M	,			x per terminal		
	5X		nnect Terminal (0.8	/			x per terminal		
	AX		erminals, (M5 or 10	,			x per terminal		
	MX	Stud I	erminals, (M6 or 1/4	4 - 20)			ax per terminal		
Group 6: Total No. of Poles	Code	Two notes METR	Description	in with Dana allow and allow			mments		
	2	Two pole – METR Three pole – METR	IC - RAU + 1 DD Ci				modules in total		
	4	Four pole – METR					modules in total		
	B	Two pole – IMPERI					modules in total		
	C	Three pole – IMPER					modules in total		
	D					· · · · ·	modules in total		
Group 7:	Code	Four pole – IMPERIAL - RAU + 3 DD Circuit Breaker poles Description					mments		
Rated Voltages	Н	125Vdc			0.1 A - 60 A Max. (Single pole only)				
and Frequency - Main Circuit	J	120Vac, 240Vac (Applicable to Listed Single Pole DD Frame Circuit Breaker)			Refer to Certificates for Approval details				
	к	240 Vac; 277Vac (Applicable to Recognized Single Pole DD Circuit breaker					tes for Approval detai		
	М	AC & DC Application for Multipole Units (80 Vdc, 240Vac, 240/415 Vac & 277/480 Vac)				Refer to Certifica	tes for Approval detai	ls	
	N		80 Vdc			Refer to Certification	tes for Approval detai	ls	
	R	120/240 Vac, 240 Vac, 240/415 Vac; 277/480 Vac (Applicable to Recognized Multipole Products)				Refer to Certifica	tes for Approval detai	ls	
	s		120/240 Vac, 240 Vac or 240/415 Vac (Applicable to Listed Multipole Products)			Refer to Certificates for Approval details			
	V	60 Vdc		No Trip Alarm, Mid Trip					
Group 8: Time Delay Characteristics	Code	Description	System	Pulse Tolerance (X In)	Code	Description	System	Pulse Tolerance (X In)	
(Pulse Tolerance @ 10 ms)	AD	Long delay 50 / 60 Hz AS & dual rated Medium delay 50 / 60 Hz	AC and DC	8 - 10	СН	Short delay 50 / 60 Hz CS & high inrush	AC	12 - 15	
	BD	BS & dual rated Short delay 50 / 60 Hz	AC and DC	8 - 10	AS	Long delay 50 / 60 Hz	AC or DC	8 - 10	
	CD	CS & dual rated Long delay 50 / 60 Hz	AC and DC	6 - 8	BS	Medium delay 50 / 60 Hz	AC or DC	8 - 10	
	AE	AH & inertia delay Medium delay 50 / 60 Hz	AC	28 - 35	CS	Short delay 50 / 60 Hz Long delay 50 / 60 Hz	AC or DC	6 - 8	
	BE	BH & inertia delay Short delay 50 / 60 Hz	AC	28 - 35	AW	AD & inertia delay Medium delay 50 / 60 Hz	AC and DC	16 - 20	
	CE	CH & inertia delay Long delay 50 / 60 Hz	AC	28 - 35	BW	BD & inertia delay Short delay 50 / 60 Hz	AC and DC	16 - 20	
	AI	AS & inertia delay Medium delay 50 / 60 Hz	AC or DC	16 - 20	CW	CD & inertia delay	AC and DC	12 - 15	
	BI	BS & inertia delay Short delay 50 / 60 Hz	AC or DC	16 - 20	H3	Short delay Instantaneous trip 50 /	DC	6 - 8	
	CI	CS & inertia delay Long delay 50 / 60 Hz	AC or DC	12 - 15	OP	60 Hz	AC or DC	None	
	AH	AS & high inrush Medium delay 50 / 60 Hz	AC	16 - 20	OX	Switch 50 / 60 Hz	AC and DC		
	BH	BS & high inrush	AC	16 - 20					

## Continues on page 4

RAU-SERIES-DAT REV. F JUNE 2023 2303042

**Data Sheet** Page 3 of 12



## **Ordering Information**

Group 9:	Code	Description	Comments
Main Circuit Current	XXXX	No current, for voltage trip poles	
Current	100M	0.1 A	
[	0100	1 A	Specific Ampere rating possible from 0.1 A to 250 A (80 Vdc) 300 A (60 Vdc)
	1000	10 A	500 A (00 Vdc)
	K250	250 A	
Group 10:	Code	Description	Comments
Circuit	BX	Circuit Breaker (Series Trip Current Sensing)	
Configuration	KX	Circuit Breaker with Auxiliary Switch	
internal		Circuit Breaker with Trip Alarm, but NO Mid Trip	
construction)	MX	(Reversed Function - Latch Type)	Handle goes to OFF position when tripped and send a Trip Alarm
0	0	Des minifier	<b>A</b> rmunanta
Group 11: Auxiliary and	Code	Description	Comments
Alarm Switches	А	DB3-Gold Tips, Equally Spaced Terminals, 2.75 mm (0.108") - EN61058 0.1 A @ 250 Vac & 0.1 A @ 80 Vdc and UL1054 0.1 A	
Types & Options	_	DB2-Silver Tips, Equally Spaced Terminals, 2.75mm (0.108") - EN61058	
(Refer to Aux switch	В	10 A @ 250 Vac & 0.1A @ 80 Vdc and UL1054 10A	
specification on	С	V4D - Silver Tips, Offset Terminals, 4.75 mm (0.189") - (10 A @ 250 Vac)	
page 2)	М	Parallel Bridge Housing - For all Parallel Bridged Poles	Use M for ALL Parallel Bridged Products
	Х	Not Applicable	
Group 12:	Code	Description	Comments
Voltage and			
Current Ratings for Dual Control,			
Shunt and Relay	XX	Not applicable	
Trip Construction			
Group 13: Terminal Options	Code	Description	Comments
for Dual Control.			
Shunt and Relay	х	Not applicable	
Coils			
0	Onde	Description	
Group 14: Future Use	Code	Description	Comments
	Х	Not applicable	
Group 15:	Code	Description	Comments
Customer Specific	Х	Not applicable	
	S	Customer Specific Product	
Group 16:	Code	Description	Comments
Handle Colour	В	Black handle, white marking.	Standard Toggle handle only
	W	White handle, black marking	Standard Toggle handle only
Crown 47:	Code	Description	Comments
Group 17: Handle Markings		Description	Comments
-	D	I - O/On - Off	
Group 18: Mounting	Code	Description	Comments
Orientation for	V	Vertical, Standard Mounting, Line at the Top	
Marking	v	vention, etandara wounting, Eine at the Top	
Group 19:	Code	Description	Comments
Front Plate			
Marking and Test Button	А	Standard Marking on Standard Toggle handle	I – O and ON - OFF and ampere rating
Group 20:	Code	Description	Comments
Inter-phase	1	Terminal cover(s)	
Barrier and Terminal Cover	2		
		Inter-phase barrier & terminal cover - small	
	3	Inter-phase barrier & terminal cover - large	
	4	Inter-phase barrier & terminal cover - Z type	
	A	Inter-phase barrier - small	
}	B	Inter-phase barrier - large	Inter-phase barriers and terminal covers may be required for multi-pole products with
	C	Inter-phase barrier - Z type large	UL listed and UL recognised approvals.
			See DD-Frame Technical Guide.
	D	Inter-phase barrier - Z type small	
	Х	Not applicable	
Group 21:	Code	Description	Comments
Approvals (Product Normally	1	UL recognized UL1077, CUR, IEC/EN60934, CE, UKCA	Normally certified to these specifications
Approved to)	2	UL listed UL489, CUL, IEC/EN60947-2, CE, UKCA	Normally certified to these specifications
	3	UL listed UL489A, IEC/EN60947-2, CE, UKCA	Normally certified to these specifications
	Code	Description	Comments
Group 22:	COue_		
Group 22: Safety Marks	X	Not applicable	

Verify approvals for specific ratings in accordance with the relevant test certificate


Data Sheet Page 4 of 12

# [H] electric


low voltage


# Remote Actuator Unit (RAU) for DD-Frame (D7)


## **Connection Diagrams**

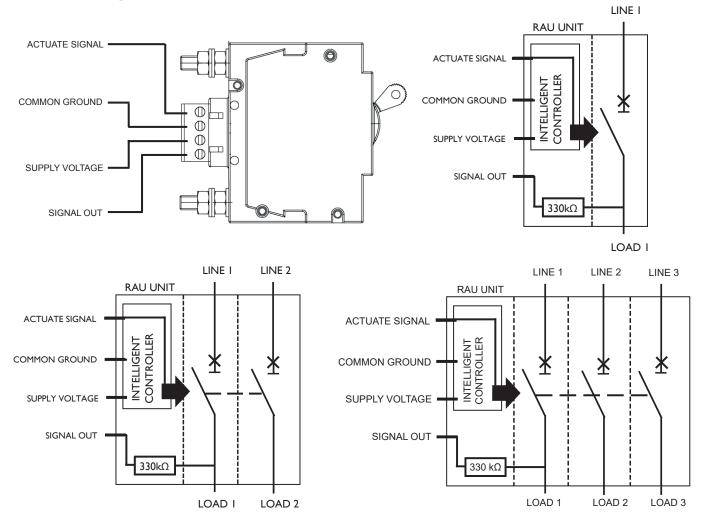

Note: Signal out only provides status indication of the adjacent pole through a 330 k $\Omega$  resistor.

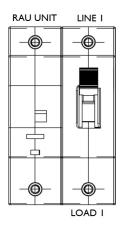

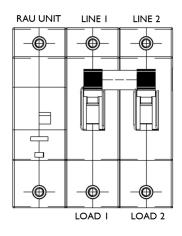

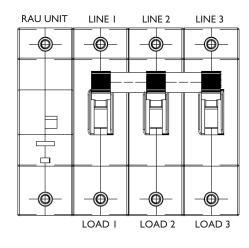

RAU-SERIES-DAT **REV. F** JUNE 2023 2303042


**Data Sheet** Page 5 of 12



Plug compatible with DEGSON 2EDGKF-5.08-04P -14 and a PHOENIX CONTACT plug 1780002.



The RAU front switch has two positions, namely "Pulse" or "Constant". Refer to RAU Operation on page 7 for more details.

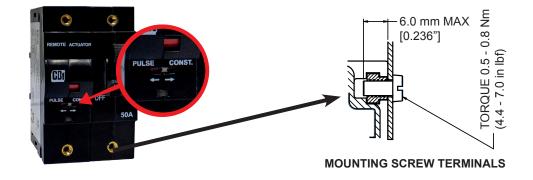

## **Installation Instructions**

- 1. Before connecting the RAU to power, the circuit breaker must be in the OFF position and the RAU front switch must be set to the user's option of PULSE or CONSTANT.
- 2. Isolate the power to the circuit breakers.
- 3. Connect the circuit breakers as required and connect the necessary wiring for the RAU as shown in the connection diagram (page 5).
- 4. With the circuit breaker in the OFF position, activate the supply to the circuit breakers and the RAU. The LED on the RAU will flash 3 times during its initialisation process.

Data Sheet Page 6 of 12

## The RAU Operation

#### 1. RAU initial conditions

- RAU in OFF position
- Actuation signal OFF
- Supply voltage ON
- LED flashes 3 times
- RAU manual operation possible

#### 2. Operations in PULSE mode (The LED is ON)

- Apply a pulse signal, the RAU will actuate ON
- · Apply another the pulse signal, the RAU will actuate to the OFF position

#### 3. Operations in CONSTANT mode (The LED is always OFF)

- Apply a constant signal, the RAU will actuate ON
- · Remove the constant signal and the RAU will switch OFF

#### 4. Changing Mode

Use a small tool to slide the front switch between CONSTANT and PULSE modes. The LED state will confirm the selection

Note: when moving the front switch from PULSE mode to CONSTANT mode while powered, may cause the breaker to inadvertently switch off, due to the signal level being low

#### 5. Relatching

To relatch after an overcurrent trip, send a signal to turn off and back on again

#### NOTE:

- DO NOT move or block the circuit breaker handles while the RAU is actuating remotely.
- DO NOT change the state of the actuate signal or RAU front switch rapidly, or while the circuit breaker is in motion, allow at least a 3 seconds waiting period before changing the state.

[H]]electric

low voltage



## LED Status Indication Confirmation

LED State	Indication
Flash 3 times	Initialisation
Flash 3 times every 4 seconds	Fault state
ON	Pulse actuation signal mode
OFF	Constant actuation signal mode
2 Short flash & 1 long flash	Initialisation fault

## **Application Notes:**

## **RAU powered from Negative DC Bus**

The DD-frame RAU requires a positive supply voltage between 18 Vdc and 80 Vdc to operate, however, systems may only have a negative voltage supply available. The RAU is able to accommodate such environments. Figure 1 shows an example of an RAU in a telecommunications application which only has a -48 Vdc bus voltage available. Resistor R is required if the potential difference between the Actuate Signal pin and the Common pin is greater than 60 Vdc.

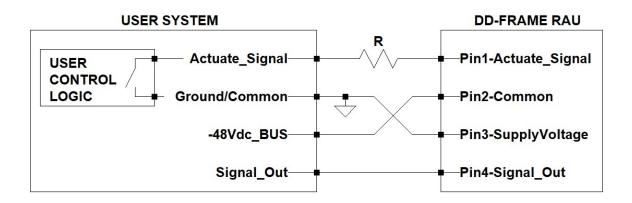


Figure 1: Wiring diagram example for DD-Frame RAU powered from negative supply bus in a -48 Vdc telecommunications application

## **Using the Signal Out**


Signal out can have many functions and is not just an auxiliary contact to indicate the open / closed state of the circuit breaker. The signal out function will depend on its specific application. This application note will convey the function of signal out for various applications under resistive loads only.

(H) electric

The signal out contact is connected only to the adjacent pole LOAD side and is isolated from the control.


Note that the signal out will vary depending on the type of load and will need to be taken into consideration when designing the RAU into a system.

## Table 2: Wiring Configuration

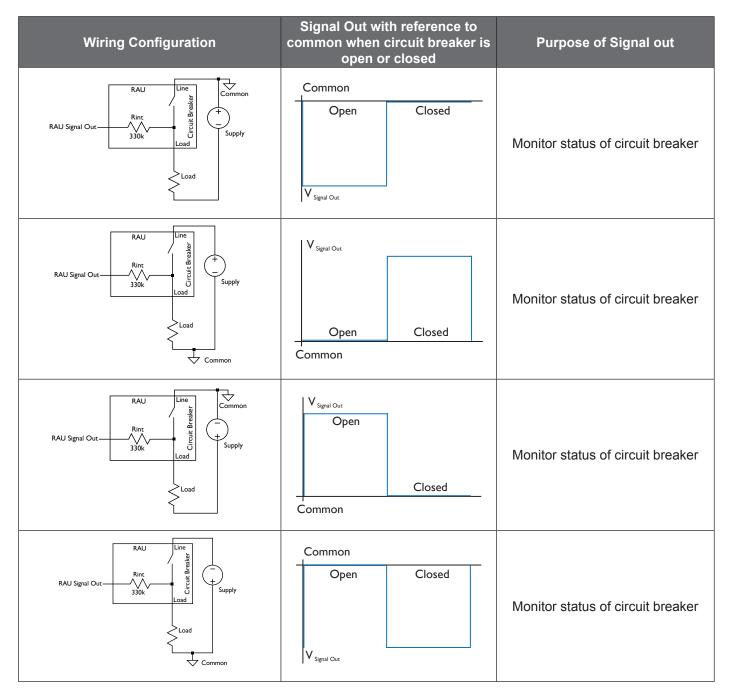

RAU-SERIES-DAT REV. F JUNE 2023 2303042 Data Sheet Page 9 of 12



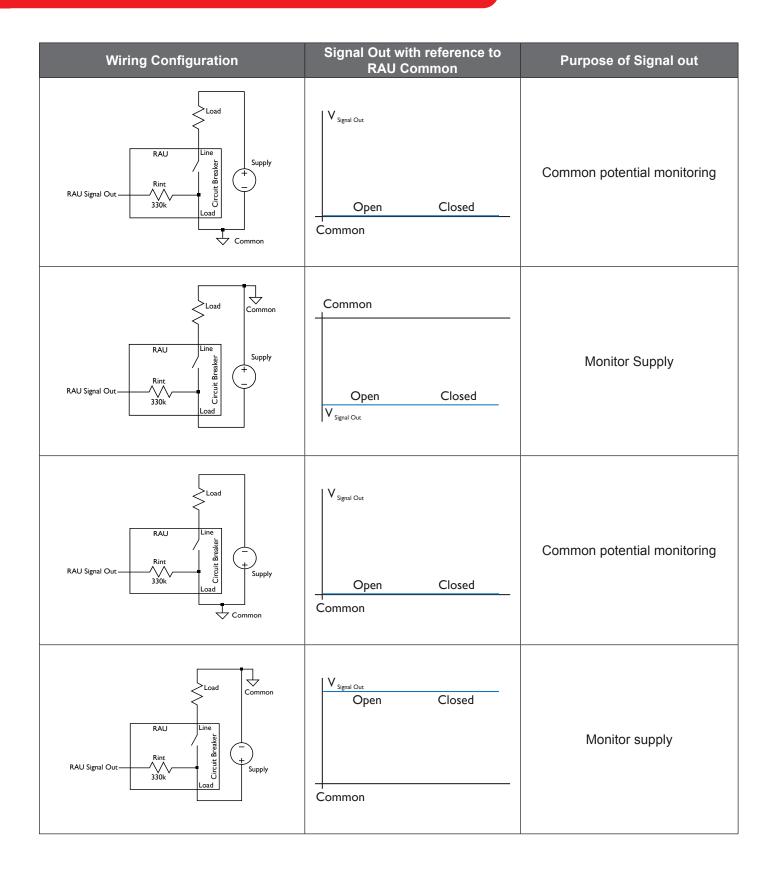

Data Sheet Page 10 of 12

## Actuation Signal Voltage Greater than 60 Vdc

The maximum actuation signal voltage that can be applied to the DD-Frame RAU is 60 Vdc. If the application is such that the actuation signal voltage will be larger than 60 Vdc, then an external resistor must be added in series as indicated in figure 2.


(H) electric

low voltage

The value of the resistor can be designed for using the following equation:

$$R = \left(\frac{V_{supply} - 60}{0.001}\right)$$
 with deviation of ± 20%

For example, if the actuation signal voltage will be 72 Vdc, then a 12 k $\Omega$  resistor must be added in series. See table 3.

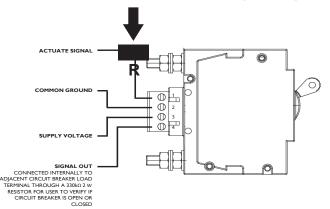

External resistor to add in series for actuation signal voltage above


Figure 2: Side view of DD-Frame RAU indicating how to add resistor in series for actuation signal voltages above 60 Vdc

#### Table 3: Actuation signal voltages and corresponding resistor values to be added in series


Actuation Voltages in Volts dc	External resistor to add in series with actuate terminal (E12 series)
72	12 kΩ
80	22 kΩ


Alternatively, a voltage divider may be implemented to create a signal voltage between 5 Vdc and 60 Vdc. The minimum current required by the actuation signal input is 5 mA.

## **Dimensional Drawings**

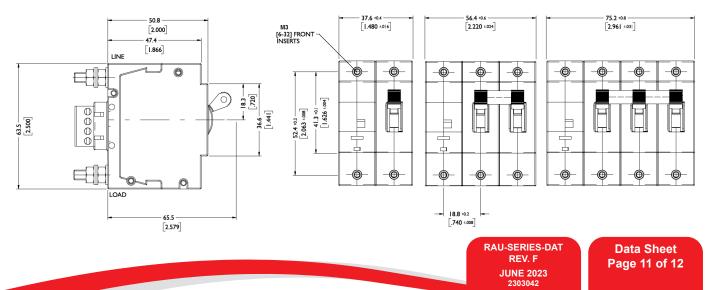

## **Outline Dimensions: Panel Cutout Standard Handle**

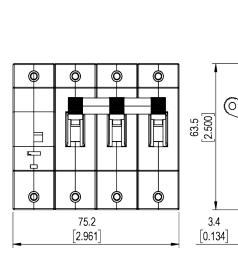

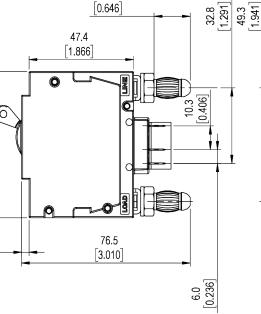

Ø4.0


0.157

36.8 1.449

52.4 2.063

11.0 [0.433]

16.4

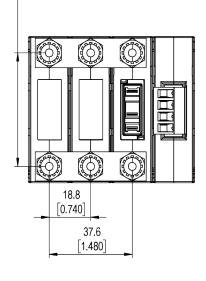

75.6 2.976

9.1

0.358

PANEL CUT-OUT

(H) electric

low voltage

NOTES

- TOLERANCE ± 0.4MM UNLESS STATED.
- 1. 2. ALL DIMENSIONS IN BRACKETS ARE IN INCH.



# PLUG-IN MATING HOLE

PLUG IN TYPE SIZE	Α	В	С	D	
PLUG IN LARGE (7.80mm DIA)	24.3 [.957]	16.4 [.646]	7.80 [.307]	7.95 [.313]	

\* Other plug-in version available on special request up to 80 A

© CBI (Pty) Ltd. All Rights Reserved.

18.8 ±0.2 [0.740 ±0.008]

Please review our Customer Terms and Conditions on www.cbi-lowvoltage.co.za © CBI (Pty) Ltd. All Rights Reserved. All rights reserved. Unless otherwise indicated, all materials on these pages are copyrighted by CBI (Pty) Ltd. No part of these pages, either text or image may be used for any purpose other than personal use. Therefore, reproduction, modification, storage in a retrieval system or retransmission, in any form or by any means, electronic, mechanical or otherwise, for reasons other than personal use, is strictly prohibited without prior written permission. CBI (Pty) Ltd reserves the right to alter any details of this document without notice and while every effort is made to ensure the accuracy of the content, no warranty is given as to the accuracy of this document and no responsibility will be accepted for error or misinterpretation and any resulting loss.

#### **EUROPEAN HEADQUARER** Emcomp International AB

Tomtagatan 17 702 32, Örebro, Sweden Tel: +46 (0)581 62 15 50 Fax: +46 (0)581 62 15 60 Email: info@emcomp.se Website: www.emcomp.se

#### **GERMANY OFFICE**

**Emcomp International AB** Gewerbepark 23 85250 Altomünster Germany Tel: +49 8254 994 334 10 Fax: +49 8254 994 334 19 Email: info@emcomp.se Website: www.emcomp.de

**Data Sheet** Page 12 of 12